




**SKF**®





# Persen van het wiellager in de naaf

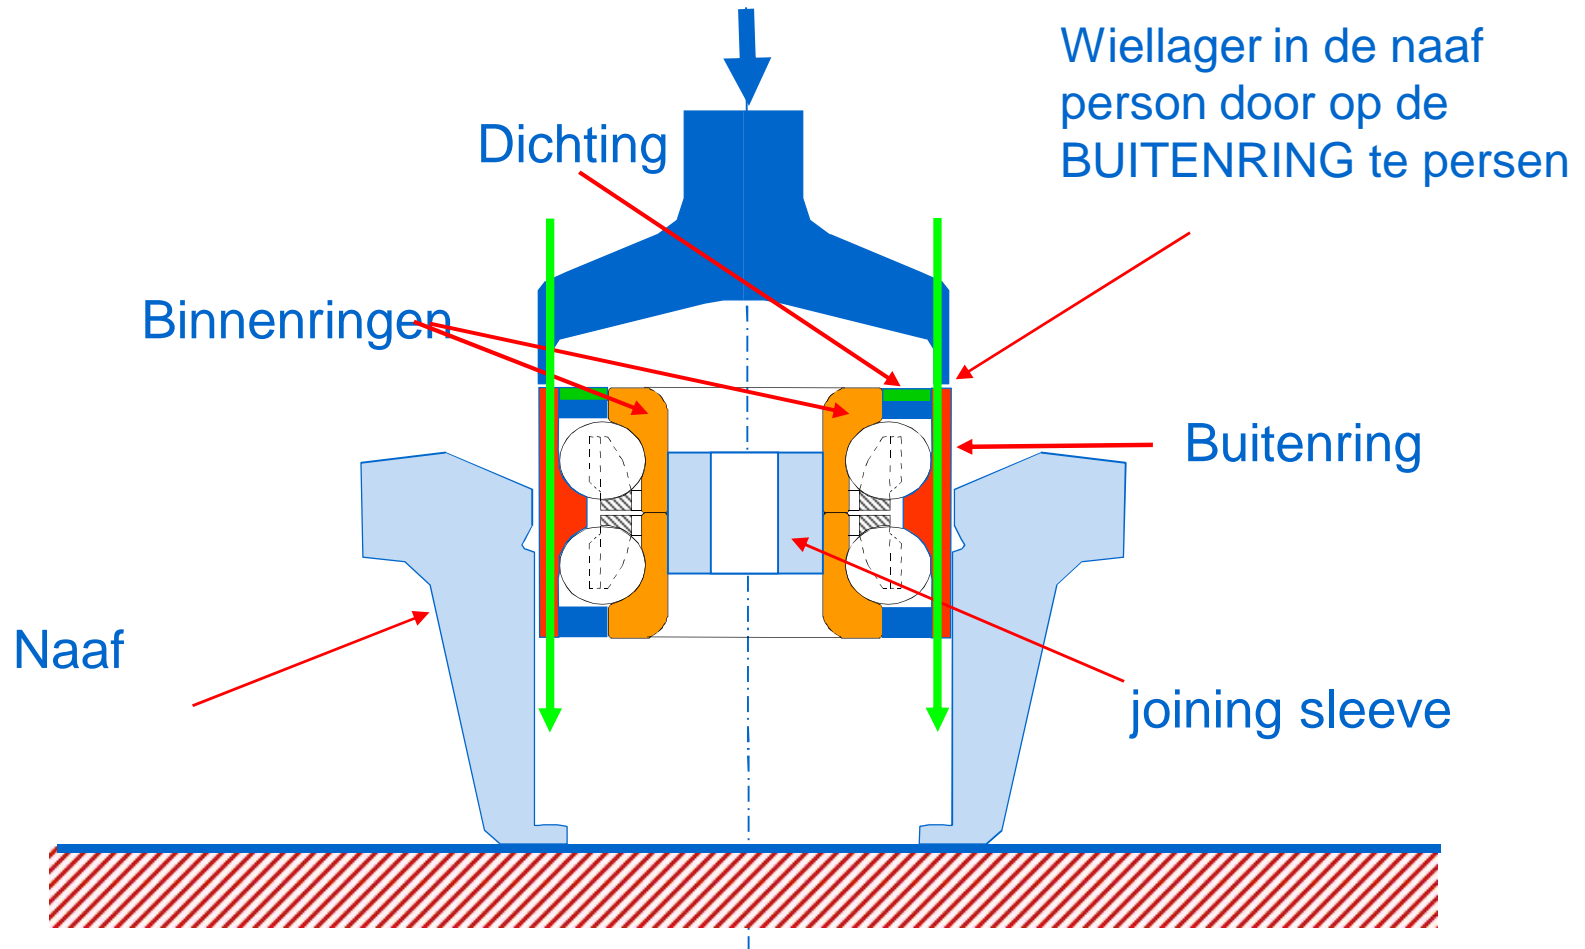


# VKBA 3569 – HUB 2.1



Front Wheel: AUDI A2, SEAT Cordoba, Ibiza IV-V, SKODA Fabia, Roomster, VW Fox, Polo

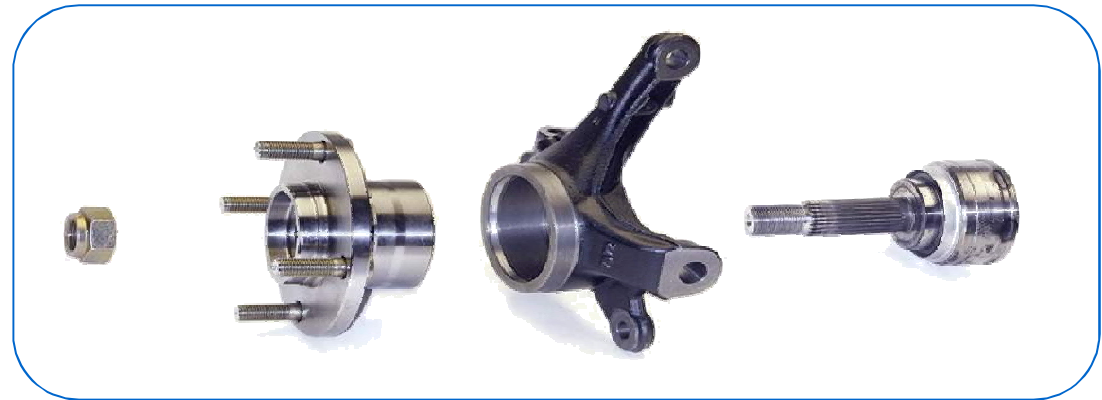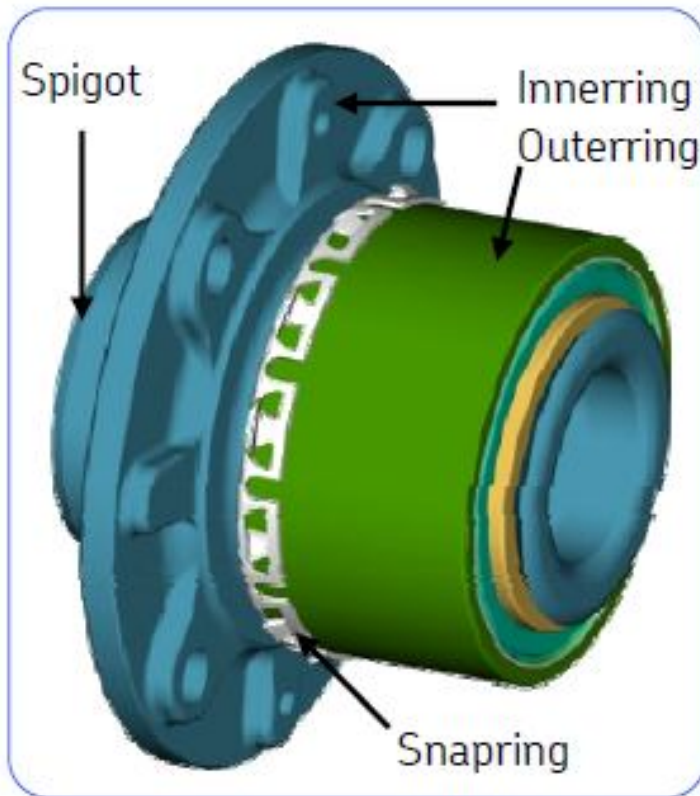


# VKBA 3569 – HUB 2.1

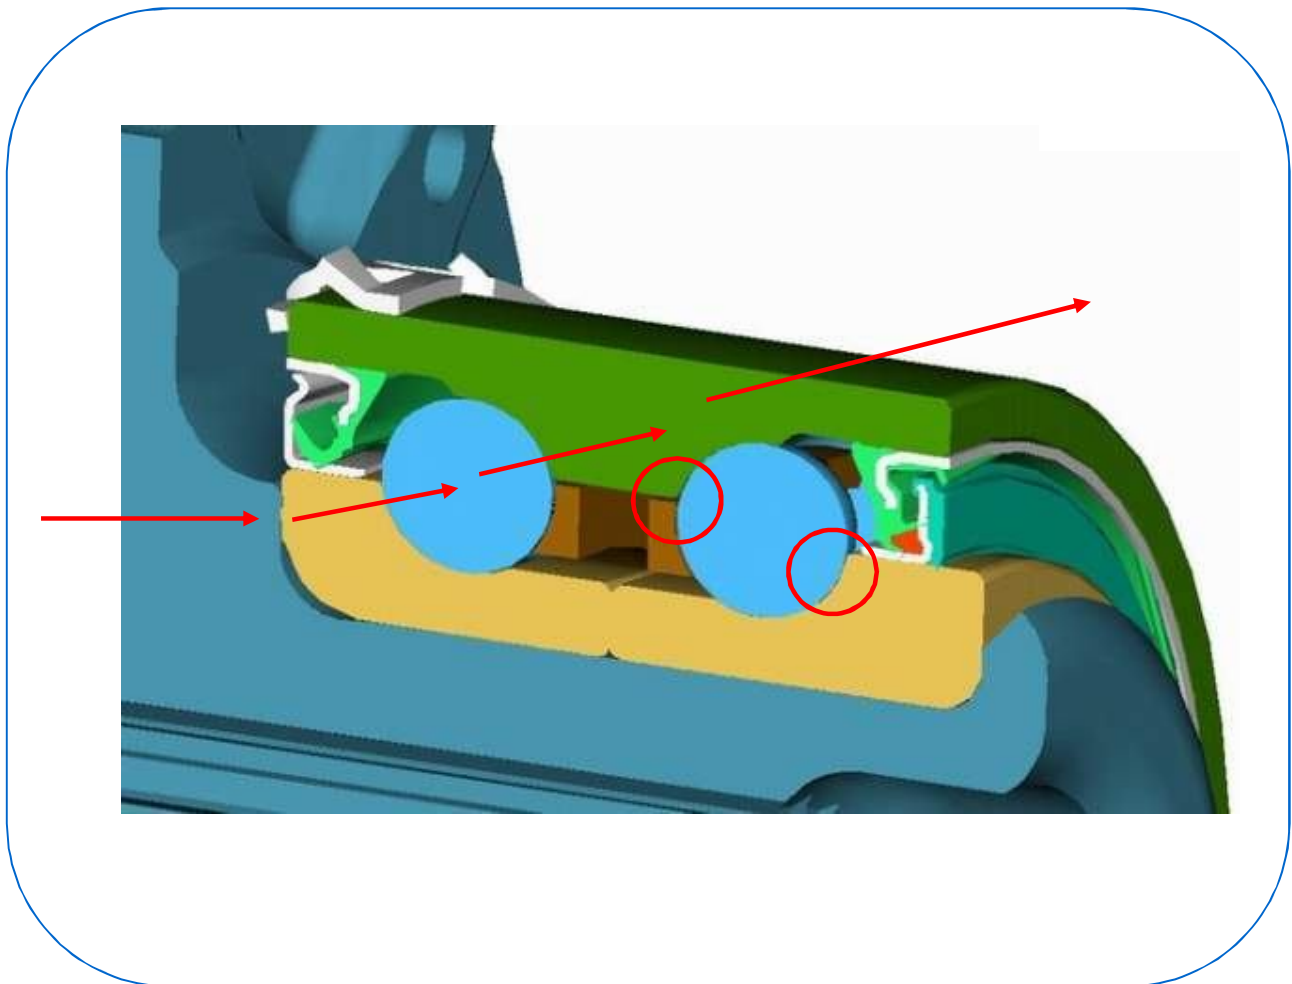

# VKBA 3569 – HUB 2.1

**DO NOT!**  
Press on the hub

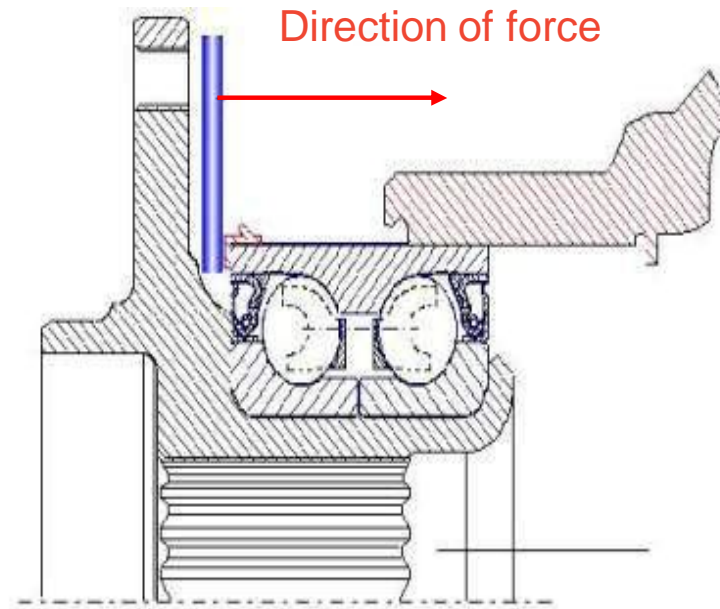

**Installatievideo**

